



# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
3. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. Only use an iron for its intended use.
5. To avoid the risk of electric shock, do not immerse the iron in water or other liquids.
6. Always turn the iron to OFF (O) before plugging or unplugging the iron from the electrical outlet. Never pull on the cord to disconnect the iron from the electrical outlet; instead, grasp the plug and pull on the plug to disconnect the iron.
7. Do not let the cord touch hot surfaces. Let the iron cool completely before putting the iron away. Loop cord loosely around iron when storing.
8. Always disconnect the iron from the electrical outlet before filling the iron with water, emptying the water from the iron, and when the iron is not in use.
9. Do not operate the iron with a damaged cord or in the event the iron has been dropped or damaged or there are visible signs of damage or it is leaking. To avoid the risk of electric shock, do not disassemble the iron. Take it to a qualified serviceman for examination and repair. Incorrect assembly might result in a risk of electric shock when the iron is used after reassembly.
10. The iron must be used and rested on a stable surface.
11. When placing the iron on its heel rest, ensure that the surface on which the heel rest is placed is stable.
12. Do not leave the iron unattended while the iron is connected or on an ironing board.
13. Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down—there might be hot water in the reservoir.
14. To avoid a circuit overload, do not operate an iron on the same circuit with another high-wattage appliance.
15. If an extension cord is absolutely necessary, a cord with an ampere rating equal to or greater than the maximum rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care shall be taken to arrange the cord so that it cannot be pulled or be tripped over.
16. Always close the filling aperture when operating the appliance.

**SAVE THESE INSTRUCTIONS**

## Other consumer safety information

This product is intended for household use only.


**A WARNING Electrical shock hazard:** This product is provided with a polarized plug (one wide blade) to reduce the risk of electric shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, have an electrician replace the outlet.

### PLEASE READ BEFORE FIRST USE:

- During first use of the iron, it may appear to smoke. This will stop and does not indicate a defect or hazard.
- Many irons spit or sputter during the first few uses with tap water. This happens as the steam chamber becomes conditioned. This will stop after a few uses.
- Steam vents should be cleaned before first use. Prepare iron for steam ironing; then iron over an old cloth for a few minutes while letting iron steam.

### Parts and features

To order parts:  
US: 1.800.851.8900  
www.hamiltonbeach.com  
Mexico: 800 71 16 100

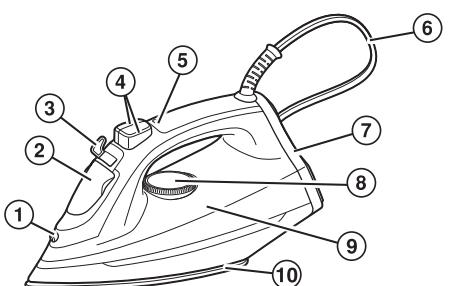

1. Spray nozzle
2. Water tank cover
3. Adjustable steam switch
4. Spray and blast buttons
5. Power ON light
6. Cord
7. Heel rest
8. Temperature control dial
9. Water window
10. Durathon™ Nonstick Soleplate\*

\*On select models

### How to dry iron

1. Plug into electrical outlet.
2. Set the adjustable steam switch to (Dry iron).
3. Turn temperature control dial to desired temperature. Allow 2 minutes for iron to reach desired temperature.
4. Begin ironing.
5. To turn iron off, turn temperature control dial to OFF (O).
6. Unplug.

## How to steam iron

**A WARNING Electrical shock hazard:** Attempting to steam iron on a lower temperature setting or failing to allow the iron to preheat for 2 minutes can result in hot water dripping from the soleplate.

1. Set the adjustable steam switch to (Steam).
2. **Water:** Use ordinary tap water. If using extremely hard water, alternate between tap water and distilled water. DO NOT add starch or fragrance to the water tank.
3. Plug into electrical outlet.
4. Turn temperature control dial to desired fabric setting in the steam range. Allow 2 minutes for iron to reach desired temperature.
5. Set adjustable steam switch to the desired steam level.
6. Begin ironing.

**OPTIONAL:** For vertical steaming, hold iron 6 inches (15 cm) from garment and do not allow hot soleplate to touch delicate garments. Press and release the blast button to steam out wrinkles. Wait at least 5 seconds before pressing blast button again.

7. To turn iron off, set adjustable steam switch to (Dry iron).
8. Turn the temperature control dial to OFF (O).
9. Unplug. Empty water from iron following directions in "Care and cleaning."

 
### Fabric setting chart

**NOTE:** To avoid garment damage, check garment label for fabric composition and ironing instructions.

STEAM SETTING	TEMPERATURE SETTING	IRONING INSTRUCTIONS
Dry iron	O	OFF
	Synthetics • Low	Dry iron using spray if necessary.
	Silk, Wool •• Medium	Iron silk on wrong side.
Steam iron	Cotton, Linen ••• High	For cotton, iron while still damp or use spray. For linen, iron fabric on wrong side.

### Garment label symbols

Fabric care labels on garments have symbols that show ironing instructions and recommended temperature settings. These symbols are shown below along with an explanation of their meaning.



### Care and cleaning

1. Turn the temperature control dial to OFF (O).
2. Unplug iron. Allow iron to cool.
3. Set the adjustable steam switch to (Dry iron).
4. To empty water from iron, slowly tilt pointed end of iron over sink until water runs out.
5. Do not store iron laying flat on soleplate.

**NOTE:** To avoid damage to the iron soleplate:

- Never iron over zippers, pins, metal rivets, or snaps.
- Wipe with a soapy cloth to clean occasional buildup on the soleplate. Never use abrasive cleansers or metal scouring pads, since they may scratch the surface.
- **Always store iron upright on the heel rest (see Step 5).**

## To self-clean

To keep the steam vents clear of any buildup, follow these instructions each time you iron using steam.

1. Open water tank cover and add water.
2. Plug into electrical outlet.
3. Turn temperature control dial to **Linen •••** setting and let iron heat for 2 minutes.
4. Turn temperature control dial back to OFF (O).
5. Unplug.
6. Hold iron over sink.
7. Turn adjustable steam switch to MAX, while pressing blast button often.
8. Allow all water to drain from iron.

### Troubleshooting

Iron won't heat.

- Is iron plugged in and the outlet working? Check outlet by plugging in a lamp.
- Is the temperature control dial turned to a fabric setting?

Water is leaking.

- Do not overfill the water tank.
- Adjust steam to a lower setting.
- If steam ironing, is the adjustable steam switch in a steam position? Is the temperature control dial in the steam range? Did the iron have enough time to preheat?
- If dry ironing, make sure the adjustable steam switch is in the (Dry iron) position.

Iron won't steam.

- Check water level.
- Is the adjustable steam switch in the (Steam) position?
- Has the iron had enough time to preheat?
- Anti-drip feature will not allow steam when temperature setting is in the dry range.

Iron leaves spots on clothing.

- **ALWAYS** empty water tank after using. Water left in tank may discolor clothing and soleplate.

Twisted cord.

- If the iron cord should become twisted, unplug iron and let cool. Hold iron cord in the middle of entire length. Let plug and iron dangle freely until cord uncoils. This will extend the life of the iron cord.

Wrinkles not removed.

- Check temperature control dial is set to correct fabric.
- Iron too hot/not hot enough.
- Check temperature control dial and adjust to desired setting. Let iron cool down 5 minutes before continuing.

## Limited warranty

This warranty applies to products purchased in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of five (5) years from the date of original purchase in Canada and one (1) year from the date of original purchase in the U.S. In addition, the Durathon™ nonstick covering on the soleplate is warranted not to wear out for a period of ten (10) years from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value. This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120 V ~ 60 Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim, do not return this appliance to the store. Please call 1.800.851.8900 in the U.S. or 1.800.267.2826 in Canada or visit hamiltonbeach.com in the U.S. or hamiltonbeach.ca in Canada. For faster service, locate the model, type, and series numbers on your appliance.