

# BLACK+DECKER

## 12-CUP PROGRAMMABLE

### COFFEEMAKER

1. One-piece cover
2. Showerhead
3. Removable filter basket
4. Brew-thru lid
5. Duralife™ carafe
6. “Keep Hot” carafe plate
7. Control panel
8. Water reservoir with cup level markings
9. Sneak-A-Cup™ feature
10. Cord storage (inside of unit)
11. Brew indicator light
12. Permanent filter (not shown) model CM1105B-CL ONLY

MODEL  CM1105B  CM1105B-CL

Please Read and Save this Use and Care Book.

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to person's including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and injury to persons do not immerse cord, plugs or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning.
- Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact Consumer Support at the number listed in this manual.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, make sure brew indicator light is off by pressing ON/OFF button (⏻), then remove plug from wall outlet.
- Do not use this appliance for other than intended use.
- Keep lid on the carafe when in use.
- Scalding may occur if the lid is removed during the brewing cycles.
- The carafe is designed for use with this appliance. It must never be used on a range top.
- Do not set a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads or other abrasive material.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

## SAVE THESE INSTRUCTIONS.

This product is for household use only.

### POLARIZED PLUG (120V Models Only)

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

### TAMPER-RESISTANT SCREW

**Warning:** This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

Product may vary slightly from what is illustrated.



USE WITH THESE FILTERS:



### ELECTRICAL CORD

- a) A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer extension cords are available and may be used if care is exercised in their use.
- c) If an extension cord is used,
  - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance,
  - 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
  - 3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

**Note:** If the power supply cord is damaged, it should be replaced by qualified personnel or in Latin America by an authorized service .

## How to Use

This product is for household use only.

### GETTING STARTED

- Wash removable parts as instructed in CARE AND CLEANING.
- Pour fresh cold water up to 12-cup level mark into the water reservoir.
- Place basket-style into removable filter basket. Place basket into filter basket holder.
- Plug cord into standard electrical outlet.
- Brew water through appliance without adding coffee grounds. This removes any dust or residue that may remain in the system during the manufacturing process.
- Discard water from the carafe from filter basket.
- Turn off appliance; unplug and allow to cool down.

### SETTING THE CLOCK

1. Plug appliance into standard electrical outlet.
2. The digital clock display flashes 12:00.
3. To change the time: Press HOUR button until the correct time appears on the display. When the time passes noon “PM” illuminates to let you know you are in PM time. If the “PM” is not illuminated it is AM time.
4. Press the MIN button to select the minutes.

**Note:** If the appliance is unplugged or power is interrupted even momentarily, the time may need to be reset.

### BREWING COFFEE

1. Open one-piece cover. Fill water reservoir with cold tap water. Use lines on side of reservoir as a guide. Do not fill with more than 12 cups of water.
- Important:** If too much water is added it will leak from the back of the coffeemaker.
2. Place paper filter or permanent filter into filter basket. Add ground coffee (we suggest 1 heaping tablespoon per cup). Place filter basket in place.
3. Close one-piece cover securely.
4. Place brew-thru lid on empty carafe, making sure it is in the down position. Then set carafe on carafe plate.

**Note:** Coffee may overflow if brew-thru lid is not properly aligned.

5. Plug cord into an outlet. Press ON/OFF button (⏻) (indicator light to the left of the HOUR button will illuminate) and brewing begins. The “Keep Hot” carafe plate will keep the coffee warm for two hours or until the ON/OFF button (⏻) is pressed.

6. When coffee grounds are cool, carefully remove and discard used grounds and filter.
7. To turn off coffeemaker at any time press ON/OFF button (⏻) (indicator light to the left of the HOUR button will turn off).
8. Unplug appliance when not in use.
9. Press tab on carafe lid to pour coffee.

### SNEAK-A-CUP® FEATURE

Remove the carafe and brewing is paused. The carafe must be placed back on the carafe plate in 30 seconds to prevent overflow. Brewing begins again.

### AUTO BREW

1. Press PROG button. The AUTO light (small dot in bottom left corner of digital display) flashes several times. Digital clock displays 12:00.
2. Quickly press HOUR button then MIN button to select the time you would like automatic brewing to begin (for example, 7:15 A.M. Make sure the P.M. light is not on.)
3. Press AUTO button, holding it down until the AUTO light stops flashing. The digital display changes to time of day.
4. To check preset auto time, press PROG button and preset auto time is displayed. Press AUTO button to reactivate the timer.
5. To cancel Auto Brew function, press the ON/OFF button (⏻).

## Care and Cleaning

This product contains no user serviceable parts. Refer service to qualified service personnel.

### CLEANING

Make sure your coffeemaker is unplugged and cool.

1. Remove filter basket. Discard coffee grounds.
2. Wash filter basket, permanent filter and carafe in dishwasher (top-rack) or by hand in hot, soapy water.
3. Wipe outside of coffeemaker, control panel and carafe plate with a soft, damp cloth.

**Note:** Do not use abrasive cleansers or scouring pads. Never immerse the coffeemaker in water.

4. To clean the inside of the cover, open the cover and leave in the open position; wipe with a damp cloth.

### CLEANING WITH VINEGAR

**Note:** With regular use, minerals and hard water can clog your coffeemaker.

A full cleaning with vinegar is recommended once a month.

1. Pour white vinegar into water reservoir up to the 6-cup mark on the water window. Add cold water up to the 10-cup mark
2. Put a paper filter in filter basket and close cover. Set empty carafe on the carafe plate.
3. Turn on coffeemaker. Let half the cleaning mixture brew into carafe (until level is around 5). Turn off coffeemaker and let it soak for at least 15 minutes
4. Turn on coffeemaker again and brew remaining cleaning mixture into carafe. Turn off coffeemaker; empty carafe and discard paper filter.
5. Fill reservoir with cold water to 11-cup line; replace carafe on carafe plate and then turn on coffeemaker for a complete brewing cycle to flush out remaining cleaning mixture. You may want to repeat this step to completely remove the vinegar smell/taste.
6. Wash filter basket and carafe as instructed in CLEANING.



### WARNING

RISK OF FIRE OR ELECTRIC SHOCK. DO NOT OPEN.

The lightning symbol refers to “dangerous voltage”; the exclamation symbol refers to maintenance instructions. See below.  
**Warning:** To reduce the risk of fire or electric shock, do not remove the cover of the coffeemaker. There are no user-serviceable parts inside. Repair should be done by authorized service personnel only.

### NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number in front of this sheet. Please **DO NOT** return the product to the place of purchase. Also, please **DO NOT** mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

### TWO-YEAR LIMITED WARRANTY (Applies only in the United States and Canada)

#### What does it cover?

- Any defect in material or workmanship provided; however, liability will not exceed the purchase price of product.

#### For how long?

- Two years from the date of original purchase with proof of such purchase.

#### What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

#### How do you get service?

- Save your receipt as proof of date of sale.
- If you need parts or accessories, please call 1-800-738-0245.

#### What does your warranty not cover?

- Damage from commercial use

- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

#### How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

Sello del Distribuidor:

Fecha de compra:

Modelo:

### Código de fecha / Date Code

CM1105B - 975W 120 V ~ 60 Hz  
CM1105B-CL - 975W 220 V ~50 Hz

© 2018 The Black & Decker Corporation and Spectrum Brands, Inc.  
Middleton, WI 53562

### Importado y Distribuido por:

**RAYOVAC ARGENTINA S.R.L.**  
Humboldt 2495 Piso# 3  
C1425FUG) C.A.B.A. Argentina  
C.U.I.T NO. 30-70706168-1

### Importado por / Imported by:

**Spectrum Brands de México SA de CV**  
Autopista México Querétaro  
No 3069-C Oficina 004  
Col. Centro Industrial Tlalneantla CP 54030  
Tlalneantla, Estado de México  
Teléfono: 01-800-714-2503

### Importado por / Imported by:

**Spectrum Brands**  
**En Chile, Household Products Chile Ltda**  
Av. Del Valle 570, Ofic. 704  
Ciudad Empresarial, Huechuraba  
Santiago - Chile  
Fono: (562) 2571 3700

### Importado por / Imported by:

**Spectrum Brands Colombia S.A.**  
Carrera 17 No.89-40  
Bogotá, Colombia  
Línea de atención al cliente: 018000510012

BLACK & DECKER, BLACK+DECKER, the BLACK & DECKER and BLACK+DECKER logos and product names are trademarks of The Black & Decker Corporation, used under license. All rights reserved.

BLACK & DECKER, BLACK+DECKER, the BLACK & DECKER y los logos y nombres de productos de BLACK+DECKER son marcas registradas de The Black & Decker Corporation, usados bajo licencia. Todos los derechos reservados.

Made in China  
Hecho en China

T22-5002788

2018/04/17

